

# Installation Instruction for PVC-Coated SpeedCouple



- 1** Tighten the set screw and install the coupling by first threading the larger OD of the coupling (sticker end) onto the conduit or elbow. Use care to ensure coupling and conduit or elbow are properly aligned to avoid cross-threading.
- 2** Loosen the set screw located in the central body of the coupling. This will disengage the internal swivel ring and allow the coupling to move to allow for proper alignment with the second piece of conduit or elbow.
- 3** With the SpeedCouple and the conduit properly aligned, thread the other end (smaller OD) of the coupling onto the conduit or elbow.
- 4** Tighten both ends as necessary with Z-wrench or strap wrench so as not to damage the outside PVC Coating.
- 5** Tighten the set screw to lock the internal swivel ring in place.

For Installation Instruction Video visit [PermaCote.com/SpeedCouple](https://www.PermaCote.com/SpeedCouple)